




Directions for using the Biorep Thermoprobe with a threaded connector

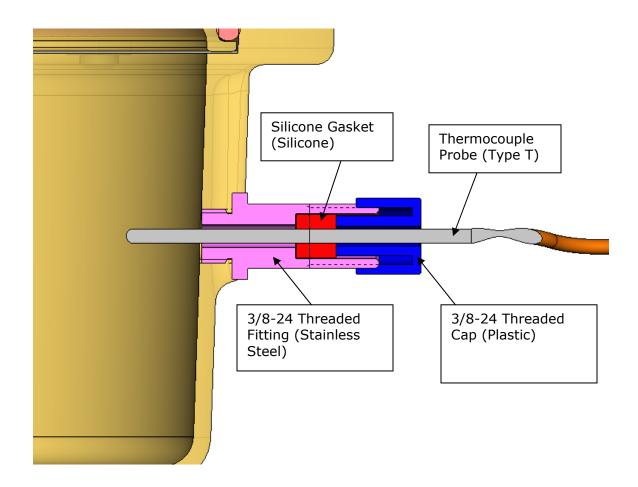

STEP 1: Remove clear polycarbonate luer connector.

STEP 2: Screw in blue plastic cap together with silicone gasket.

As the blue plastic cap is screwed in, the silicone gasket is compressed and creates a seal.

As the silicone gasket is compressed, its inner diameter will get smaller thus tightening the thermocouple probe. This prevents the in – out movement. If the probe is pushed in our pushed out too hard, it will move. The seal however will not be compromised.